


SPYDER FX Series

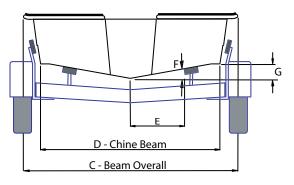

1. CRI does not recommend roller style trailers. Roller trailers will void your hull warranty.


2. All FX Series boats have a 10 degree deadrise. Do not use keel rollers.

3. Drawings do not show centering bunks. CRI requires centering bunks running from approximately the axle location to the forward cross member. Centering bunks should support either side of the keel about 8 inches.

4. FX19 Side Bunks should be 12 ft in length of carpeted 2x 6. FX17 Side Bunks should be 10 ft in length of carpeted 2x 6.

Locating 4 foot long carpeted side guides over the wheel fenders is recommended for easy loading.

Keep Side Guides LOW - just above fenders

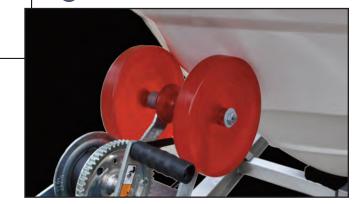

Recommended Bow Stop and Side Rollers

W1 = Weight of Hull Only

W2 = Weight of Hull, Max Engine,

Full Fuel, Batteries, Gear

A = Length Overall E = I

Α

TBA

17'-1"

19'-1"

В

TBA

16'-1"

18'-4"

С

TBA

76"

83"

D

TBA

62"

69"

- B = Length Transom to Bow Eye
- C = Beam Overall

Model

FX15

FX17

FX19

D = Chine to Chine Beam

E = Keel to Inside Bunk Edge

B - Transom to Bow Eye

A - Length Overall

E

TBA

21"

26"

F = Deadrise from Keel to Inside Bunk Edge

F.

TBA

6"

6-1/4"

G

TBA

5-3/4"

6"

н

TBA

16"

16"

W1

TBA

860

1020

W2

TBA

1375

1800

- G = Deadrise from Keel to Chine
- H = Height of Bow Eye over Keel